4' Backless Bench

ASSEMBLY INSTRUCTIONS

12 – 4" Coated Steel Screws


1 – Square Drill Bit

Parts Included:

- 3 Backless Bench Legs
- 1 4' Assembled Bench Lengths

Build the bench on a flat or level surface.



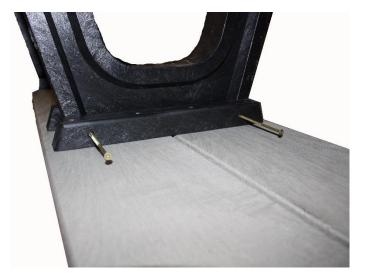

Step 1 - Lay the Assembled Bench Length upside down on a clean level surface. Place the two backless bench legs in between the 2" x 2" runners. See photo above. Step 2 - Screw 4 – 4" coated steel screws into each leg using the predrilled holes through the 2" x 2" runners. See the photo above. Repeat for both legs.

Step 3 – Flip Bench upright. Your bench is complete. Enjoy!

Hardware Included:

Power Drill with Square Bit or Screwdriver with Square Tip

Tools Needed: